




1

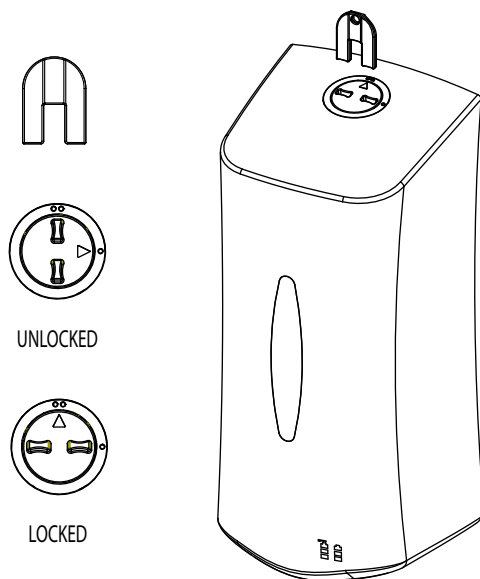


2

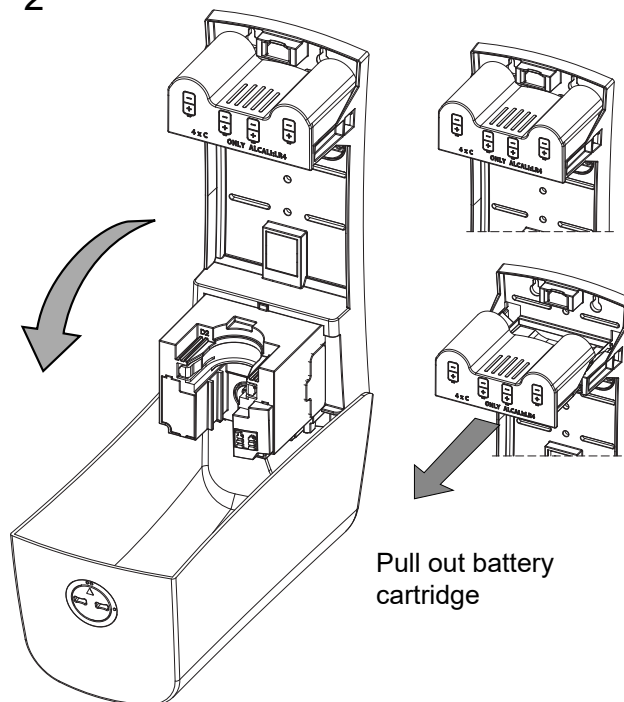


3

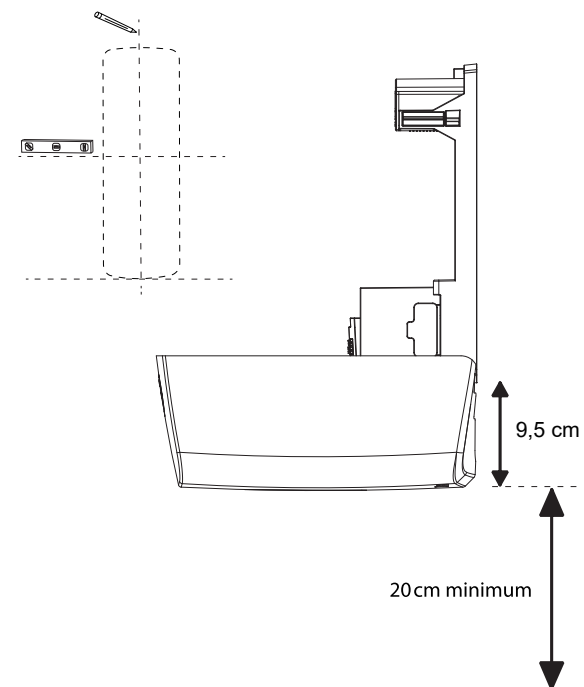


4

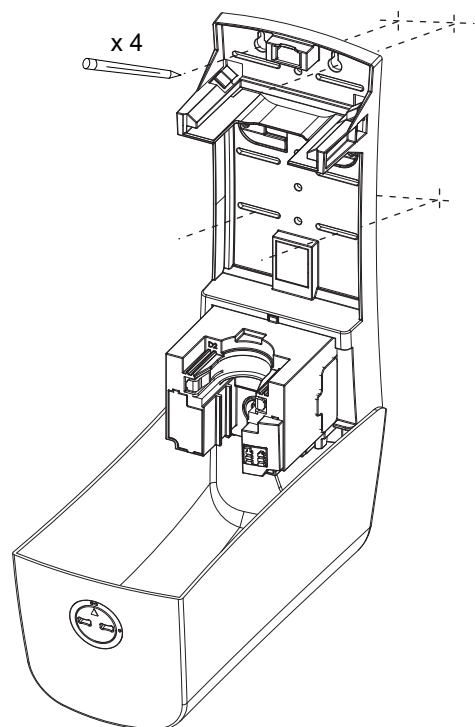

5

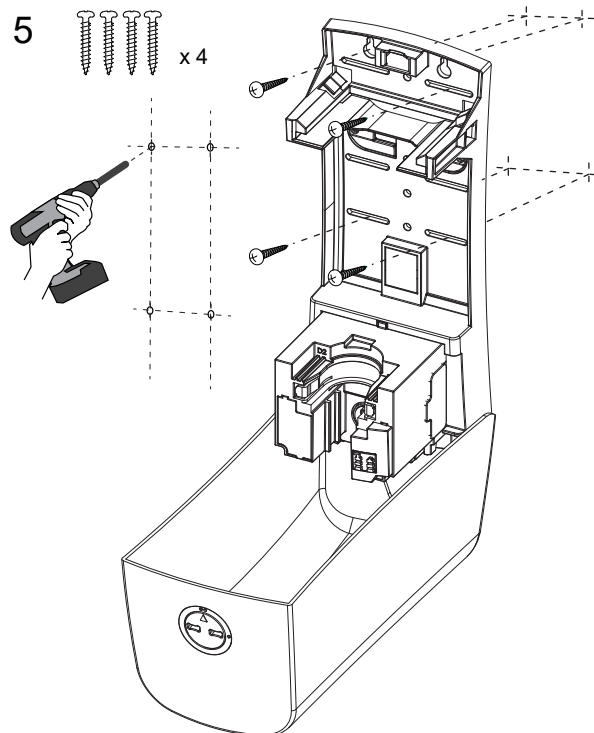


6

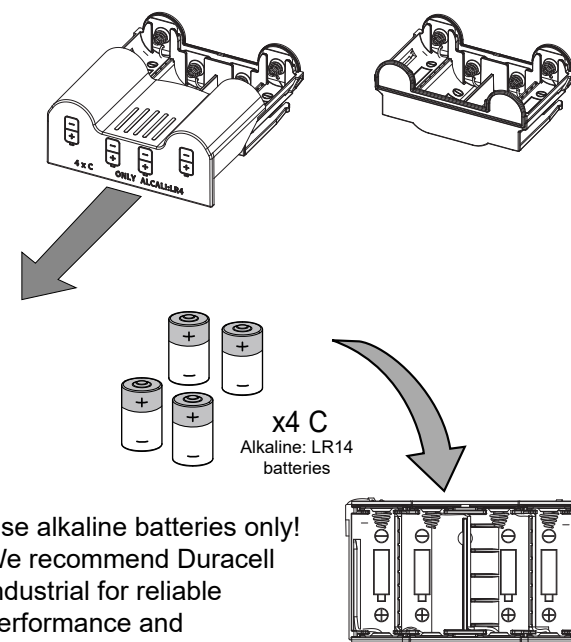


Use alkaline batteries only!
We recommend Duracell
Industrial for reliable
performance and
long-lasting power. Dispose
used batteries according to local laws.

7


Pull straight up to remove bottle cap

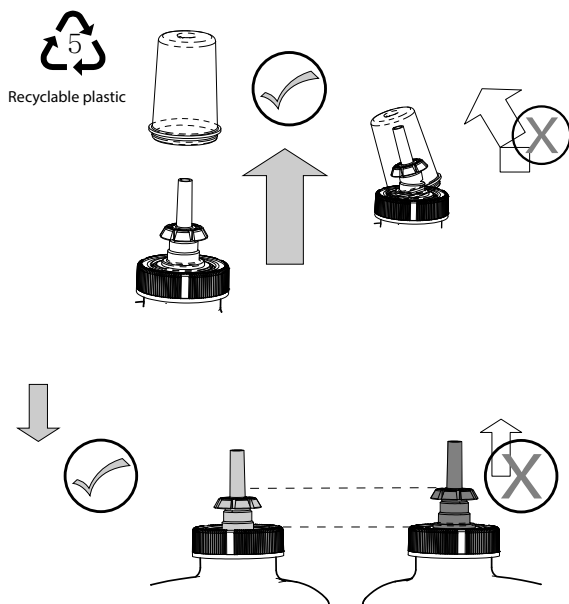

8

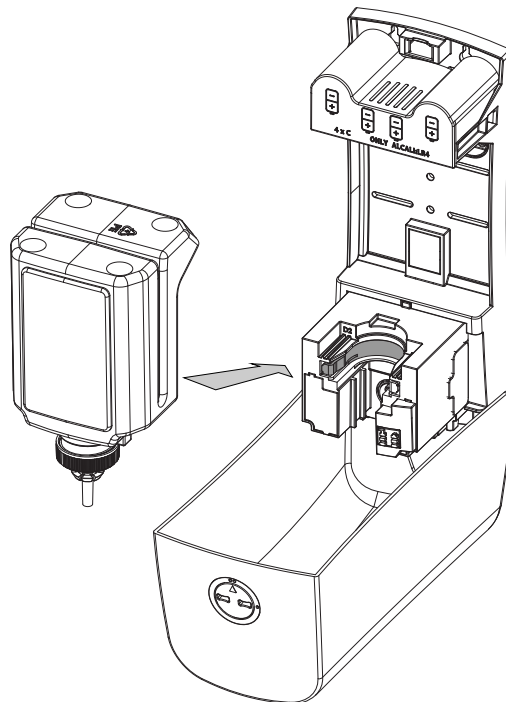


9

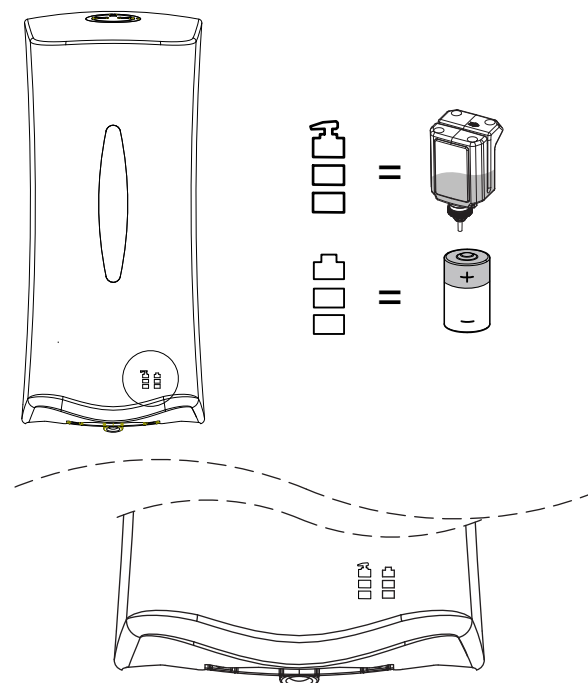

10

First time:
Activate the pump
by passing the hand
underneath a few times

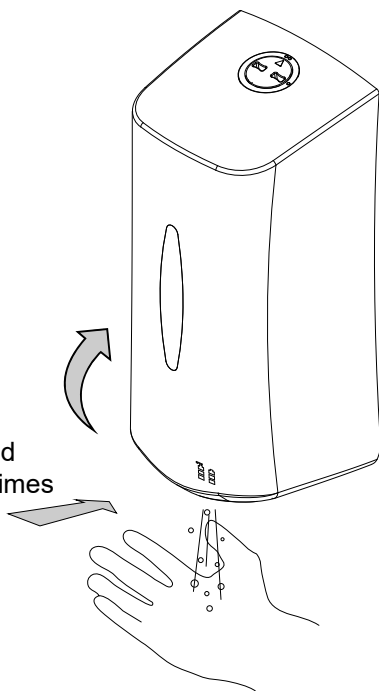

Cleaning and Maintenance

Clean exterior surfaces of the dispenser using warm water and mild soap. **DO NOT USE ABRASIVE CLEANSERS.** Dry with a soft cloth.

Cautions

1. It is the installer's responsibility to ensure that installation of the unit complies with all applicable codes, standards and regulatory requirements.
2. Do not install this dispenser above heat sources or near sources of ignition/flame.
3. Do not install where a failure of the mounting system or dripping of product from hands may cause damage to equipment or create a potential safety hazard.

 
L.E.D. Light Meaning

Flashing Red = Bottle not installed



L.E.D. Light Meaning

1. Full Green Bars = Full Bottle
2. Two Green Bars = Half Bottle
3. One Green Bar = Low Bottle
4. One Red Bar = Critically Low Bottle



L.E.D. Light Meaning

1. Full Green Bars = Full Battery
2. Two Green Bars = Half Battery
3. One Green Bar = Low Battery
4. One Red Bar = Critically Low Battery

Troubleshooting

(1) Dispenser not dispensing - indicator lights lit green

- a. Pump is seized in the dispenser. Remove the bottle, re-insert it properly. The disc of the pump must engage with the actuator, and the pump must be seated properly in the housing.
- b. Ensure that hand detecting sensors are not covered or contaminated.
- c. If all above did not work, there is an electrical problem, please contact us.

(2) Dispenser not dispensing - no indicator lights lit

- a. Open and close the cover. Ensure that the cover is fully closed. Check if the dispenser is dispensing.
- b. Remove the battery cartridge, then re-install it. The lights should come on. If not, replace the battery cartridge or batteries.
- c. Ensure that hand detecting sensors are not covered or contaminated.
- c. If all above did not work, there is an electrical problem, please contact us:

KiiltoClean AS (Norway) tel. +47 66 77 11 70 / www.kiilto.no
KiiltoClean (Sweden) tel. +46 (0)40 680 15 40 / www.kiilto.se



Description of the unit:

Model name: AB TF Dispenser
Rated voltage: 6V
Rated frequency or nature of supply: D.C.
Rated input or current: < 0.12 mA

KiiltoClean AS (Norway):

KiiltoClean AS,
Hagaløkkveien 13, 1383 Asker,
Norway

KiiltoClean (Sweden):

KiiltoClean
Industrigatan 23
233 51 Svedala
Sweden