



Updating your X-Smart Pro/Pro+ via wifi

- 01** Select 'settings' on the top left of your device
- 02** Click 'general settings'
- 03** Scroll To 'WLAN settings'
- 04** Select and connect to an available network & input password (the device will tell you when connected)
- 05** Go back to 'settings'
- 06** Select 'update'
- 07** Select 'update now'

An update takes up to 30 minutes to run

